Model B8-2/E60

- 8 circuit slip rings
- Compact design
- · Mounts on shafts up to 2" in diameter
- Permanently lubricated bearings
- Rugged stainless steel construction
- · Instrumentation quality rings and brushes
- 60 pulse per revolution encoder option

Description



Michigan Scientific's *B Series Slip Ring Assemblies* are ideal for applications that require the slip ring to be mounted directly on a rotating shaft. Typically used for automotive drive shaft measurement applications, they are designed to fit on shafts up to 2" in diameter and make an electrical connection to strain gages, thermocouples, or other sensors that have been installed on rotating equipment. The slip ring brushes and rings are made of precious metals, which minimize noise and enable the assemblies to be used for low level instrumentation signals.

The *B8-2/E60* is particularly useful for drive shaft applications where both torque and thrust measurements are needed. In addition, the *B8-2/E60* provides enough circuit connections for measuring up to five amplified strain gage or thermocouple signals. Michigan Scientific's precision strain gage and thermocouple amplifiers, positioned on the rotation side of the slip ring, greatly improve signal quality. They reduce the amount of errors due to long lead wires, connector resistance variations, electro-magnetic interference, and temperature gradients across slip ring contacts.

Connections are made through color coded solder terminals located on the slip ring rotor and a connector on the slip ring stator. Each slip ring assembly includes a 15 ft. cable with a single mating connector attached. The compact-width design of these slip rings make them ideal for applications where limited space is available.

Encoder option

The encoder included in the *B8-2/E60* Tubular Slip Ring Assembly produces a 60 pulse/revolution 5-volt square wave. The TTL compatible signal is produced by a hall-effect sensor, which allows speed to be determined down to 0 rpm. The voltage required to drive the encoder can range from 5.5 to 45 DC volts.

8500 Ance Road Charlevoix, MI 49720 Tel: 231-547-5511 Fax: 231-547-7070 01-5-22 Rev. A MICHIGANSCIENTIFIChttp://www.michsci.comcorporation


321 East Huron Street Milford, MI 48381 Tel: 248-685-3939 Fax: 248-685-5406

Tubular Slip Ring Assembly

Specifications

	B8-2/E60
Circuits	8
Current Capacity	1A
Temperature Range	-40°F to 250°F (-40°C to 121°C)
RPM Rating	7000 RPM
Maximum Peak Noise*	0.1Ω
Width	1.30 in. (32.96 mm)
Weight	1.9 lbs (0.86 kg)
Output Connector	Bendix JT02RE-10-35P
* Resistance variation across any pair of slip ring contact.	

B8-2/E60 Configuration

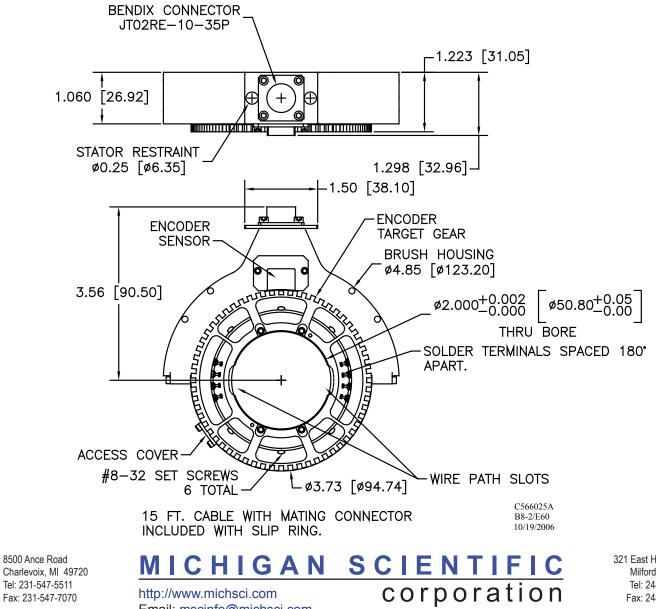

Charlevoix, MI 49720 Tel: 231-547-5511 Fax: 231-547-7070 01-5-22 Rev. A

http://www.michsci.com Email: mscinfo@michsci.com 321 East Huron Street Milford, MI 48381 Tel: 248-685-3939 Fax: 248-685-5406