


Thermocouple Amplifier

Model AMP-TC-M1

- Available with 1, 2 or 3 channels
- Cold junction compensation
- High-level voltage signal output
- Precision, low noise, differential amplifier
- Signal is greatly immune to external noise sources
- Units available in K, J, T, and E types
- Wide signal bandwidth, near 1.16 kHz
- Input signals can be grounded or isolated

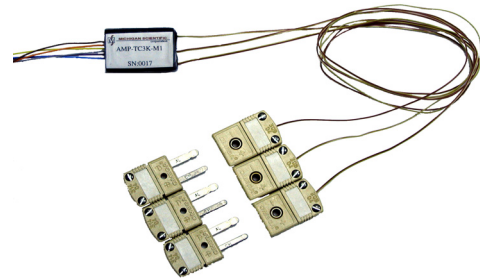

MODEL AMP-TC-M1
(Thermocouple Amplifier)

Description

The *Miniature Thermocouple Amplifier* is designed to provide cold junction compensation and amplification of thermocouple sensors. These amplifiers may be used in conjunction with Michigan Scientific slip rings. Although all Michigan Scientific slip ring assemblies are manufactured with instrumentation quality rings and brushes, superior data accuracy is achieved by locating the thermocouple amplifier on the rotating side of the slip ring. This configuration greatly improves signal quality because the amplifier is located closer to the sensor, which reduces errors due to temperature gradients across dissimilar metals in the slip ring and magnetic interference.

The *Miniature Thermocouple Amplifier* consists of stable differential amplifiers and a cold junction compensator. Each amplifier provides amplification for one, two or three thermocouples depending on the model selected. Amplifiers are available for J, K, E, or T thermocouples. For more channels, more than one amplifier may be used with a single control unit. The amplifiers can be adhered, potted or strapped to many different types of parts. Some Michigan Scientific slip rings are available with the amplifiers built into the rotor.

8500 Ance Road
Charlevoix, MI 49720
Tel: 231-547-5511
Fax: 231-547-7070


MICHIGAN SCIENTIFIC
<http://www.michsci.com>
Email: msscinfo@michsci.com
corporation

321 East Huron Street
Milford, MI 48381
Tel: 248-685-3939
Fax: 248-685-5406

Rev: 1/6/12

Thermocouple Amplifier

Configuration

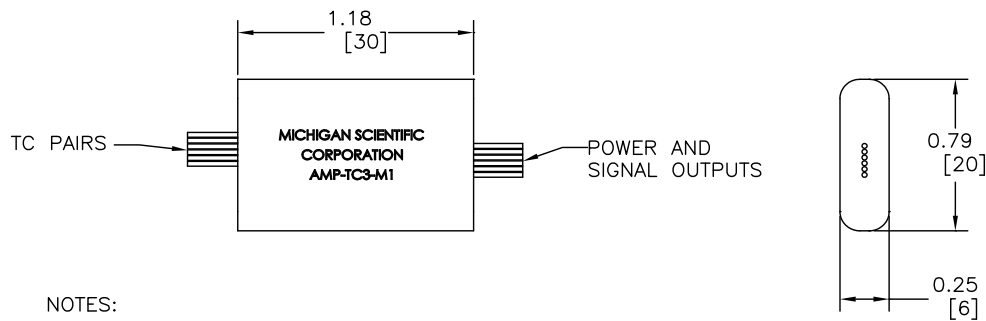

NOTES:

- [1] POWER AND OUTPUT LEADS ARE 7", BUT CAN BE SPECIFIED BY CUSTOMER
- [2] TC INPUT WIRES CAN BE SPECIFIED WITH / WITHOUT OMEGA MINATURE TC CONNECTOR
- [3] OTHER CONFIGURATIONS AVAILABLE. CHECK WEBSITE FOR DETAILS.
- [4] DIMENSIONS ARE IN INCH [mm]

C566062A.DWG
10/07/2005

Specifications

PARAMETER	SPECIFICATION
OUTPUT	Output is not linearized over temperature, if necessary, the output may be linearized externally
Range	± 10V Max
Sensitivity @ 25°C TC Temperature	10 mV/°C
Capacitive load	1000 pF Max
TEMPERATURE ERROR	Includes errors due to cold junction compensator
Initial @ 25°C Case Temperature	± 2°C Max
-25°C to +85°C Case Temperature	± 3°C Max
-55°C to +125°C Case Temperature	± 5°C Max
NOISE	Referred to input of amplifier
0.01 - 10 Hz	0.8 µV p-p
DYNAMIC RESPONSE	
Frequency Response	1.16 kHz
Slew rate	0.4 V / µs
Settling Time 0.1% / 0.01%	40 µs / 50 µs
POWER REQUIREMENTS	
Voltage	± 15 VDC
Quiescent Current	± 5 mA Max Total (1 channel)
	± 10 mA Max Total (2 channels)
	± 15 mA Max Total (3 channels)
ENVIRONMENT	
Specification	-25 to +85°C (-13 to +185°F)
Operation	-55 to +125°C (-67 to +257°F)

8500 Ance Road
Charlevoix, MI 49720
Tel: 231-547-5511
Fax: 231-547-7070
Rev: 1/6/12

MICHIGAN SCIENTIFIC
corporation

<http://www.michsci.com>
Email: mscinfo@michsci.com

321 East Huron Street
Milford, MI 48381
Tel: 248-685-3939
Fax: 248-685-5406