



C226408A

DATE BY REVISION LOC.

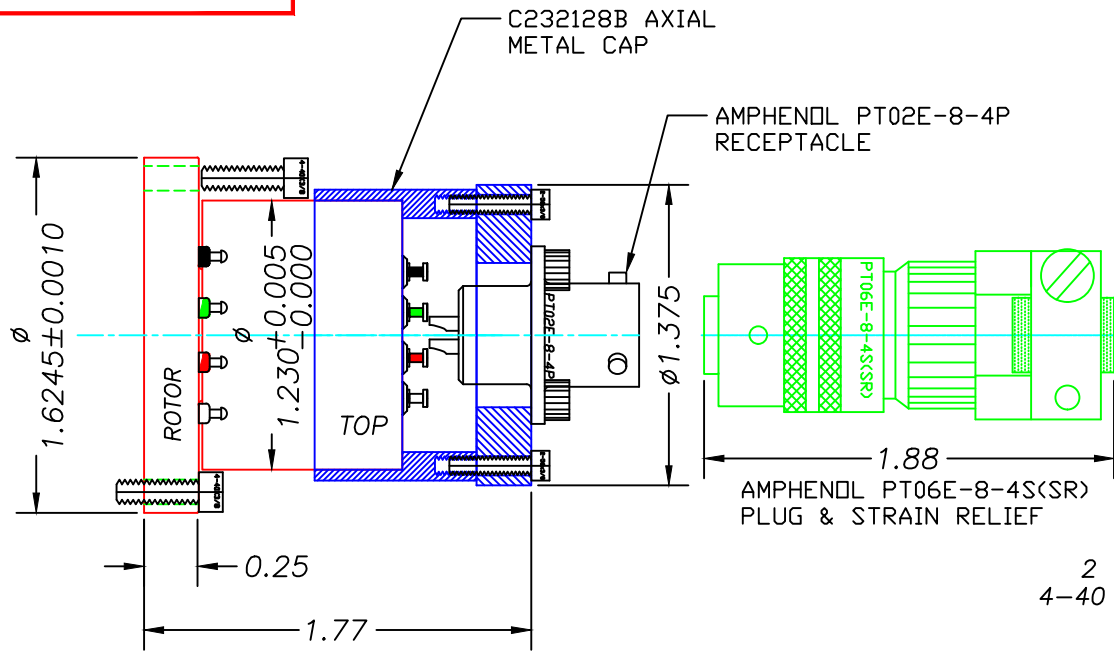


WHITE  
GREEN  
RED  
BLACK

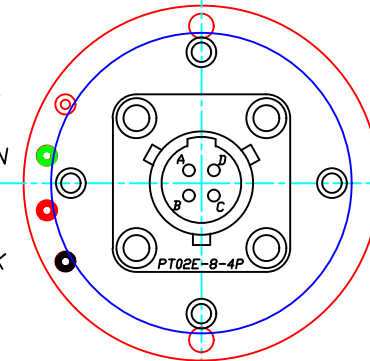

2 HOLES ON 1.435 Ø  
4-40 SCREW CLEARANCE

WHITE  
GREEN  
RED  
BLACK

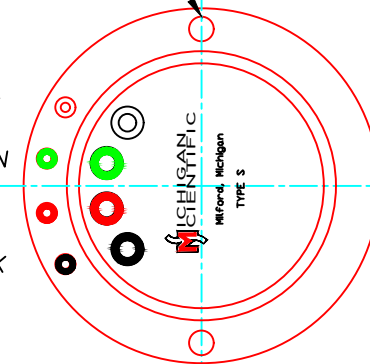

TYPE S4 SHOWN WITHOUT  
THE AXIAL METAL CAP

RING POSITION	TERMINAL COLOR	CONNECTOR CONTACT
BOTTOM 1	BLACK	A
2	RED	B
3	GREEN	C
TOP 4	WHITE	D

MODEL S4 SLIP RING & C232128B AXIAL METAL CAP &  
AMPHENOL PT02E-8-4P & PT06E-8-4S(SR) CONNECTORS

THE CONNECTOR BRACKET IS GLUED ONTO THE SLIP RING  
STATOR WITH AN ADHESIVE SUCH AS HARDMAN 4002 EPOXY  
OR A LOCTITE RETAINING COMPOUND.

© COPYRIGHT 2022 MSC

**MICHIGAN SCIENTIFIC CORPORATION**

08500 ANCE ROAD  
CHARLEVOIX, MI 49720  
PHONE: (231)547-5511 FAX: (231)547-7070

DESIGNED BY: KDL	DATE: 11-4-22	SCALE: 1:1
TITLE: S4 & AXIAL STATOR XCTR		
DRAWING NO.: C226408A		
DESIGN MAY CHANGE WITHOUT NOTICE		

W:\SLIPRINGS\S-SERIES\S4\C226408A.dwg, 11/11/2022 3:52:52 PM, kdarsen