

MINIMIZE
ANGULAR
MOVEMENT

SLOTTED BRACKET

ALLOW
RADIAL
MOVEMENT

ALLOW
AXIAL
MOVEMENT


ALUMINUM RESTRAINT ARM

0.176




1.200

0.906


2 HOLES.
4-40 THD.
0.25 MIN THD
DEPTH. FOR
ROTATION
RESTRAINT.

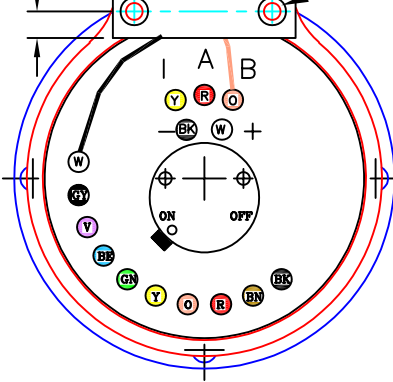

0.031

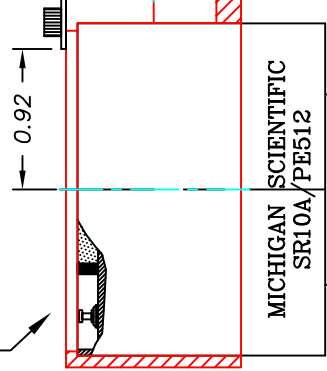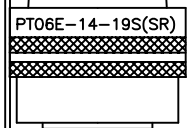

MACHINE A PILOT
IN YOUR SHAFT
THAT IS SQUARE
& CONCENTRIC

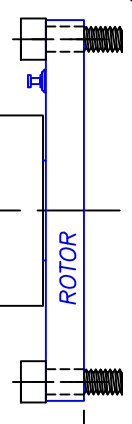

CONNECTOR
BRACKET
GLUED ONTO
STATOR

2.58