
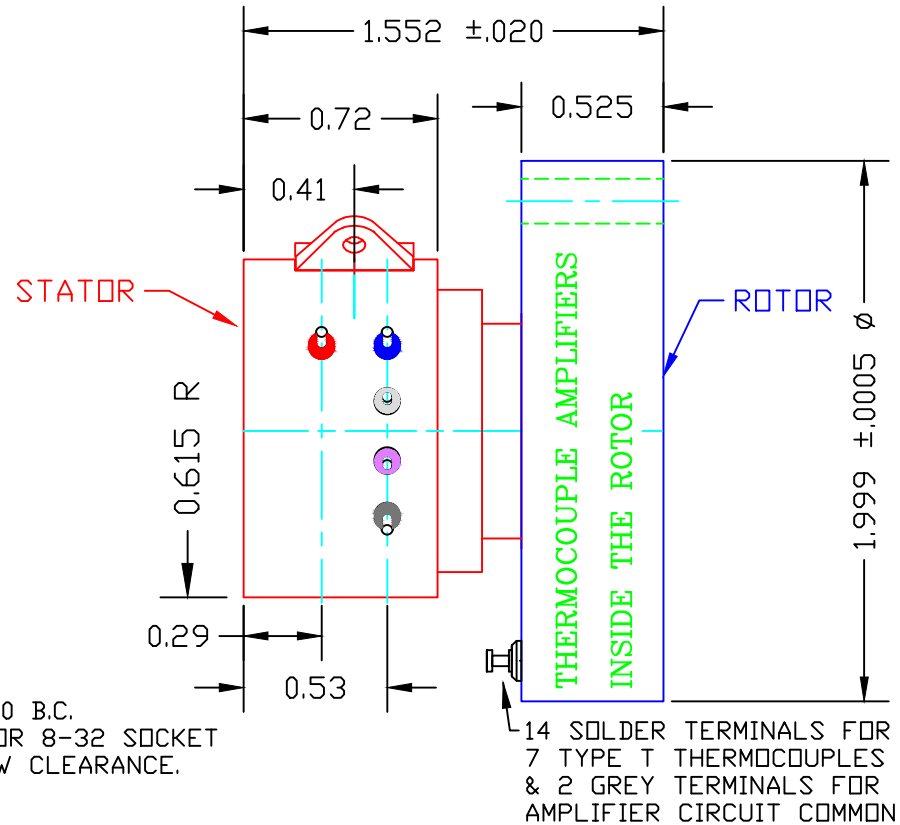


C213042A

9-23-21 KDL 7TC, NOT 6TC

MODEL SHORT S10M/T/TC7TT/LH

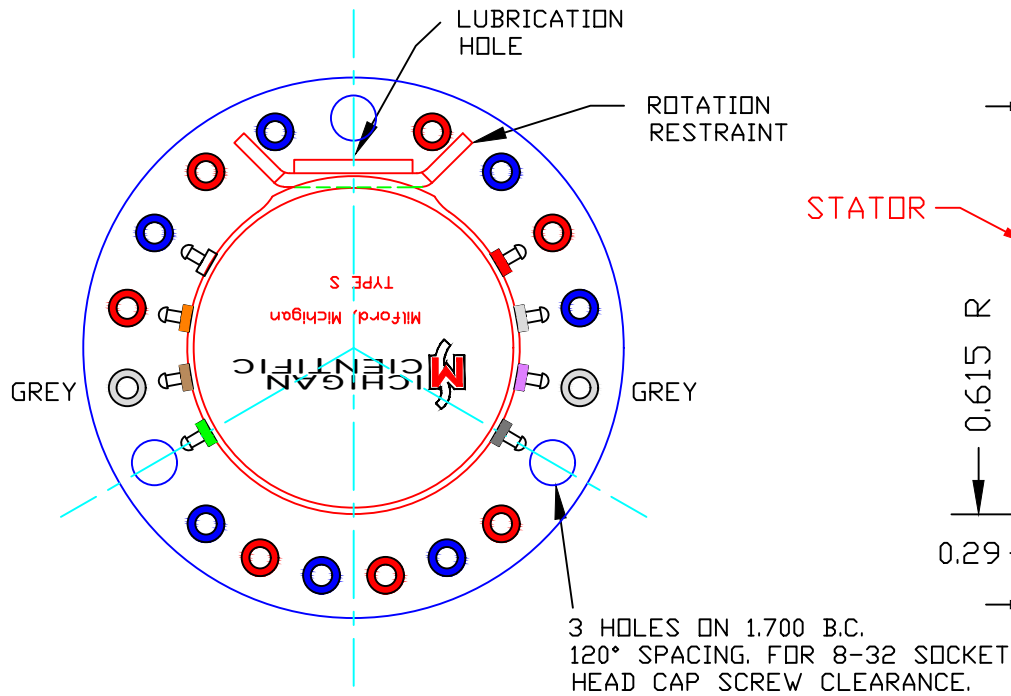

- 10 SLIP RING CONNECTIONS.
- 7 TYPE T THERMOCOUPLE AMPLIFIERS IN ROTOR.
- THE RINGS HAVE A FILM OF LUBRICATION & A HOLE TO ADD A FEW DROPS OF ATF (TYPE F ONLY) EVERY 10 TO 20 MILLION REVS.
- SPEED RATING 20,000 RPM.

ALL DIMENSIONS IN INCHES
DESIGN MAY CHANGE WITHOUT NOTICE

MICHIGAN SCIENTIFIC CORPORATION
 08500 ANCE ROAD
 CHARLEVOIX, MI 49720
 PHONE: (231)547-5511 FAX: (231)547-7070

COPYRIGHT © 2021

TOLERANCES .xxxx ±--- .xxx ±--- .xx ±.01 ANGLES ±-°-'	DESIGNED BY: KDL	DATE: 9-8-21	SCALE: 1:1
SURFACE FINISH ---RMS	CHECKED BY:	SHT OF SHTS:	SIZE AH
DRAWING NO.: C213042A	MATERIAL:		